


## 1. Identify nurse call system type


Quantic requires HJM310 cable.

InterCall, Chub & SAS requires HJM309 cable.


Aid Call requires HJM309 cable and HJR076 adapter. Courtney Thorne requires HJM309 cable and HJM02 adapter.


Medicare requires HJM309 cable and HJM355 adapter.

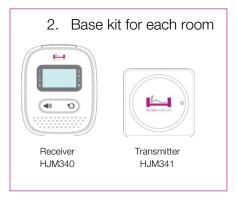

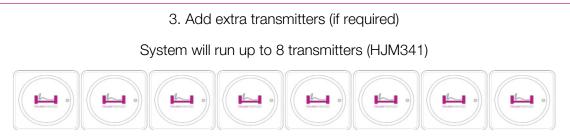

4. Add the sensor mats to connect to the transmitters (any combination of the below)

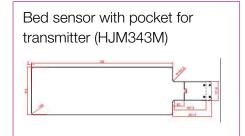



Floor sensor mat (HJM301)



Will require (HJM342) cable to connect mat to transmitter

5. Guardian can also be used with earlier Harvest falls alarm system

To use Guardian with the earlier wired sensor mats you will require a (HJR078) cable to connect to each wired mat.



HLV301M



HLV301S



HJM302 Sensor Mat Carpet Cover Please ask for more information