

CONTENTS

WARNINGS & CAUTIONS	4-5
INTENDED PURPOSE	6-10
1 DEFINITION OF THE GROUPS MENTIONED	6
2 NON-COMPLIANT USE	7
3 SAFETY INSTRUCTIONS	7
3.1 GENERAL SAFETY INSTRUCTIONS	7
3.2 SAFETY INFORMATION FOR THE OPERATOR	8
3.3 SAFETY INFORMATION FOR THE USER	8
3.4 SYMBOLS USED	9
3.5 CLEANING & DISINFECTION	10
3.6 SERVICING & MAINTENANCE	10
3.7 SERVICE LIFE & DISPOSAL	10
TECHNICAL SPECIFICATION	11
OVERVIEW	12 -13
OPERATION	14
CLEANING & CARE	15
ROUTINE MAINTENANCE AND SERVICING	16-17
TROUBLESHOOTING	18-21
PARTS LIST	22
GUARANTEES & WARRANTIES	23
DECLARATION OF CONFORMITY	24

WARNINGS & CAUTIONS



READ THIS INSTRUCTION MANUAL AND OBSERVE SAFETY INSTRUCTIONS.



WARNING

- This pump must be properly installed and operated as directed by this user manual.
- The pump should be checked regularly to ensure correct operation. Loss of function will remove all pressure relieving properties.
- This pump, when connected to a pressure relieving system, is intended for use as part of a pressure ulcer prevention program; do not rely solely on this device to achieve the result. The medical professional is responsible for applying best medical judgment when using this system.
- Select the correct setting for the occupant's weight and therapy required. Care should be taken not to accidentally change pressures once set as the effectiveness of the therapy may be reduced.
- All hoses must be free of kinks, twists and must be properly connected and positioned so as not to cause any obstruction.
- Do not position the pump in a way that prevents access to the disconnection device (mains power plug).
- Ensure the mains lead or pump cannot become trapped or crushed, e.g. by raising or lowering of bed or bed rails or any other moving object.
- Check the mains lead is damage free and positioned so as not to cause an obstruction or injury e.g. strangulation or trip hazard.
- Ensure that the electricity supply is of the type stated on the pump unit.
- Do not place pump on or near a heat source or cover with bedding.
- Harvest Healthcare advise against smoking whilst the system is in use to prevent the accidental ignition of associated items which may be flammable, such as bed linen. We advise a risk assessment is carried out before using any medical equipment to protect the user and service user.

WARNINGS & CAUTIONS

- Do not expose the pump to liquids.
- Wireless equipment such as mobile phones should be kept at least 10ft/3m away from the system.
- The mattress/cushion and pump should be cleaned between patient uses.
- Do not use bleach, chlorine releasing agents in concentrations over 1000 ppm, solvents or alcohol-based cleansers, e.g. Phenicol, Hibiscrub, Clearsol, Stericol and Hycoline as these will destroy the mattress material. Full cleaning instructions can be found on **page 15**.
- Suitable for continuous use.
- Do not modify the mattress/cushion or pump unit in any way.
- Do not connect to any other medical device or equipment.
- Not for use in an oxygen enriched environment.
- Not for use in an outdoor environment.
- Store the system in a clean and dry environment, out of direct sunlight.



Electrical equipment can be hazardous. Only authorised technical personnel should remove the rear pump case for maintenance. Removal of the case by unqualified personnel will invalidate the warranty.



Before cleaning the unit ensure that the electrical supply to the pump has been disconnected by removing the plug from the power supply.

GENERAL INFORMATION



BEFORE USING THIS SYSTEM FOR THE FIRST TIME:

- Read through this instruction manual conscientiously from start to finish.
- Note the safety instructions which must be observed.

Harvest Healthcare products bear the CE mark and meet all safety and functionality requirements.

These safety requirements can only be met if the user is satisfied with the proper condition of the product (including accessories) before use.

INTENDED PURPOSE

Harvest 1 is our simplest pump providing controlled compressed air to a pressure care mattress or active seat cushion suitable for patient weights of 25 stone or less. The inflated cells within the supplied product provide an alternating pressure surface designed to reduce surface pressure on the skin and therefore reduce risk of the development of pressure ulcers in susceptible patients.

Harvest 1 is ideal for use in community and care home settings as it has a simple interface with a dial. The pump is easy to connect and disconnect and is lightweight for ease of use for the carer. Both visual and audible alarms come as standard for safety, and a static mode is found on some previous models.

The Harvest 1 has a medium flow rate and fits with our Kensington overlay, Sandringham replacement, Hampton replacement and the Prime Comfort Active mattresses. Active seat cushions are also available for these systems. Harvest Healthcare supply a pump and mattress but it is the user's responsibility to ensure each system meets the guidelines set out in the pump and mattress guide (shown below). Failure to do this could put the end service user at risk. This could prolong the recovery process or increase the risk of further tissue damage.

For information on our mattress range please refer to the mattress user manuals available on our website www.harvesthealthcare.co.uk.

Active Mattress/Cushion and Pump Guide

	Harvest 1 (Max. Patient Weight)	Harvest 250 (Max. Patient Weight)	Harvest 3 (Max. Patient Weight)
Kensington Overlay	✓ 158 kg	✓ 184 kg	✗
Sandringham	✓ 158 kg	✓ 200 kg	✗
Hampton II	✓ 158 kg	✓ 200 kg	✓ 254 kg
Prime Comfort Active	✓ 247 kg	✓ 247 kg	✗
Duke	✗	✓ 165 kg	✓ 247 kg
Balmoral Plus	✗	✓ 200 kg	✓ 254 kg
Balmoral II	✗	✓ 200 kg	✓ 254 kg
HH20 Seat Cushion	✓ 158 kg	✗	✗
Blenheim Seat Cushion	✗	✓ 152 kg	✗

GENERAL INFORMATION

OPERATOR

An operator is any natural or legal person who uses the equipment or on whose instruction it is used (e.g. nursing homes, specialised retailers, health insurance companies, medical suppliers).

USER/CARE PERSONNEL

Users are persons who as a result of their vocational training, experience or briefing are authorised to operate the equipment. Furthermore, the user/care personnel can recognise and avoid potential dangers and assess the clinical condition of the service user.

PATIENT/OCCUPANT/SERVICE USER

The person in need of pressure care support, due to being identified as at risk of developing of pressure ulcers by a suitably qualified carer or other.

QUALIFIED PERSONNEL

Qualified personnel are employees of the operator who as a result of their vocational training or briefing are entitled to deliver, assemble, disassemble and transport the product.

2 NON-COMPLIANT USE

All uses deviating from the intended purpose, which may also be hazardous as a result. This includes for example:

- Incorrect installation.
- Operation by persons who have not been instructed in its use.
- Using the system with non-approved parts/accessories.
- Using the system if any of the components are damaged or faulty.

3 SAFETY INSTRUCTIONS

3.1 GENERAL SAFETY INSTRUCTIONS



During the briefing, specific attention must be drawn to any potential dangers which can occur despite correct operation. Before putting the product into service for the first time, the Instruction Manual must be read conscientiously and in detail by the user/care personnel.

Programming of the system should be carried out by competent trained personnel. Use only spares and accessories supplied or approved by Harvest Healthcare. Only suitably trained personnel are allowed to operate the system.

GENERAL INFORMATION



The mains cable must be free and not be allowed to be caught up in the bed's moving mechanisms. The mains cable may be damaged or it may be pulled out of its socket and electric leads exposed as a result.

If the mains cable or the mains plug are damaged, the relevant part must be replaced. This work should be carried out by the manufacturer or authorised service agents.

When connecting the mains plug do not use multiple sockets since liquids may penetrate into these (fire hazard and electric shock).

3.2 SAFETY INFORMATION FOR THE OPERATOR



With the help of this Instruction Manual, instruct each user in the safe operation of this system before it is put into service for the first time.

Advise the user of any hazards which may occur if not handled correctly.

Only persons who have been properly instructed may operate this system. This also applies for persons who only operate the system on a temporary basis.

3.3 SAFETY INFORMATION FOR THE USER

Ensure that the operator instructs you in the safe operation of this system.

In addition, pay particular attention to the 'Warnings and Cautions' (**page 4-5**) and the 'General Safety Information' as described in **3.1**.

If there is a suspected fault or damage, turn off the pump and unplug the mains plug from the socket. Clearly mark 'Out of Order', take out of service immediately and inform the person in charge without delay.

GENERAL INFORMATION

3.4 SYMBOLS USED



This symbol indicates general hazards. There is a danger to life and health.



Conformity mark in accordance with the MDR regulation.



The symbol for Protection Class II device, double insulated.



The symbol for type B device according to EN 60601-1.



Fragile, handle with care.



This way up.



Keep dry.



Recycling symbol. Refers to packaging that can be recycled (cardboard).



Keep away from sunlight



This product must be disposed of in a designated refuse bin for waste electronic devices (WEEE) in the European Union. Do not dispose of as normal domestic waste.




No smoking. No naked flames.



Read instructions / consult manufacturers guide.



This symbol indicates electrical hazards. There is danger to life and health.



EU Representative.



UK Representative.



Date of manufacture.

GENERAL INFORMATION

3.5 CLEANING & DISINFECTION



Do not immerse electrical components in water but wipe with a damp cloth only. The electrical components must not be cleaned with a high-pressure cleaner or water jet. Disinfection by wiping only is allowed.

Full cleaning and disinfection instructions can be found on **page 15**.

3.6 SERVICING & MAINTENANCE



Servicing must only be carried out by qualified personnel.

A technical check and/or safety inspection must be conducted at least once a year or after a lengthy break in use.

Any defects, damage or signs of wear must be rectified without delay. Only original spare parts from Harvest Healthcare may be used, otherwise all guarantees or warranties will be invalidated.

See **pages 16-17** for 'Routine Maintenance' and 'Routine Servicing'.

3.7 SERVICE LIFE & DISPOSAL



The system must not be disposed of as normal domestic waste after its service life, but must be disposed of in a designated refuse bin for waste electronic devices (WEEE) in the European Union. Do not dispose of as normal domestic waste.

Our full terms & conditions including product warranties are available by request or can be found on our website www.harvesthealthcare.co.uk.



PARTS AND DATA MAY UNDERGO FURTHER DEVELOPMENT AND THEREFORE DEVIATE FROM THE DETAILS GIVEN.

TECHNICAL SPECIFICATION

HARVEST 1 TECHNICAL SPECIFICATION

Pump Model No.	HPU1
Operating Cycle	10 minutes
Dimensions	90 x 150 x 290mm
Weight	1.7 kg
Air Flow Output	7 lpm
Pressure Setting	Manual


PUMP POWER REQUIREMENTS

Power Rating	8 VA
Voltage	220-240V, 50Hz
Fuse	T1AL 250V
Medical Classification	IP21
Safety Standards	EN 60601-1. EN 60601-1-2

For any further assistance, please contact a member of the Harvest Servicing team at servicing@harvesthealthcare.co.uk

OVERVIEW

PUMP OVERVIEW

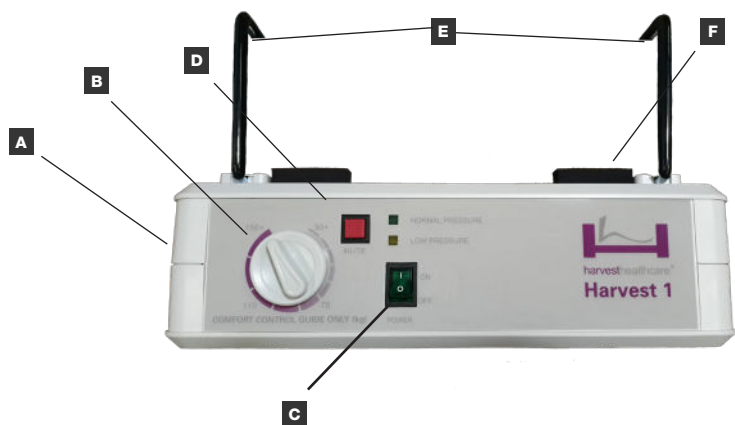

- | | | | |
|----------|-----------------------------|----------|---|
| A | Feed Tube Connection | D | Visual Low-Pressure Warning with Alarm Mute |
| B | Manual Comfort Control Dial | E | Bed Hooks |
| C | Power Switch | F | Non-slip Feet |

OVERVIEW

A Feed Tube Connector

Pipes from the mattress connect here. The pump must be able to be disconnected in an emergency for CPR to be administered. Always disconnect both the feed pipes from the pump and open the CPR valve on the mattress if CPR is to be administered.

B Manual Comfort Control Dial

The pump has a scale printed on the front panel in kilograms. Rotate the dial to set - the pointer should be as close to the service user weight as possible. Once the mattress is in use, the user can adjust the setting as required for the service user's needs. A slight increase of the comfort setting may be required if the service user needs more support while the bed is profiled. When the bed platform is laid flat readjust the setting as required.

C Power Switch

When the switch is in the ON position it will illuminate to indicate that the pump has a power supply.

D Visual Low Pressure Warning / Alarm

The pump is fitted with an audible and visual alarm. The 'Mute' button is used to reset the alarm. The low pressure LED will flash as the pump inflates the mattress. When the mattress is inflated the pump status will change and the normal pressure indicator will illuminate. The alarm will activate after 40 minutes if the mattress has not fully inflated. When the mattress is inflated the alarm mode will reset automatically. The alarm will reactivate if it detects a fault on the system.

E Bed Hooks

Attach the pump to the foot end of the bed. Adaptor brackets are available to fit different sizes of beds. If the pump cannot be attached to the foot end of the bed it is the user's responsibility to ensure that the pump is placed in such a position that it will not cause harm or injury to the service user. **The pump unit must be placed so that it clearly be seen and monitored at all times.**

F Non-Slip Feet

These are fitted to reduce vibration transfer from the pump unit to the bed.

OPERATION

INFLATING THE MATTRESS/CUSHION

- 1 Press the power On/Off switch to the ON position: the switch should illuminate to show it has a power supply.
- 2 The low pressure warning light will now illuminate to indicate the mattress is being inflated. Once the mattress is up to the correct pressure, the low pressure warning light will go off.
The mattress is now ready to be used.



Set the pump to run at the correct pressure to suit the weight of the service user. Refer to the Pump Control Panel guide on the front of the pump.



To turn off the system; press the power button to OFF and unplug from the mains supply.

TRANSPORT MODE

If the pump needs to be disconnected for any reason attach the transport cap to the feed tube connector. This will prevent deflation, keeping the remaining air within the mattress.

The alternating action stops in this mode.

SETTING UP PROCEDURE

It is important to follow the correct setting procedure to ensure the patient receives sufficient support whilst achieving maximum pressure relief and comfort.

Failure to follow this procedure could result in the patient being put at risk.

- 1 When the mattress is fully inflated set the dial to the service user's approximate weight. Position the service user in the lying position. If required, reset the weight setting to meet the patient's comfort needs.
- 2 Ensure that the comfort setting is altered correctly when the patient moves from a lying to a sitting position and vice versa. If a patient is being moved to a sitting position, the comfort control dial should be increased to provide more support for the patient. For example, if the patient is 50kg and is in the sitting position the comfort dial will need to be increased to the 60kg setting.

The Harvest 1 Pump can be fitted to the mattresses listed below. Although the systems have been designed with no minimum weight limit, it is recommended that end users weighing below 32 kg be reviewed more regularly to ensure the mattress surface is suitable for their individual needs. The manufacturer cannot guarantee the clinical benefits, and it is the responsibility of a medical professional to make clinical judgments.

Manufactured by Grand Healthcare: Hampton II, Balmoral II, Balmoral Plus, Kensington, and Sandringham.

Manufactured by Harvest Healthcare: Prime Comfort Active Mattress, Partnership Active Mattress, and Duke Active Mattress.

CLEANING & CARE

PUMPS



DO NOT USE HYPERCARBONATE, PHENOL-BASED CLEANING SOLUTIONS, ABRASIVE COMPOUNDS OR CLEANING PADS.

NOTES FOR CARE OF ASSOCIATED PRODUCTS

- Following the use of a detergent and/or disinfectant solution, wipe down the surface with clean water using a clean cloth and allow it to dry.
- Frequent or prolonged exposure to high concentrations of disinfectant solutions will reduce the useful life of the pump.
- For general cleaning wipe with a soft cloth dampened with a mild detergent and water solution. This may be followed by either wiping with a sodium hypochlorite solution to a dilution of 1000ppm (parts per million) or by using alcohol wipes.

TRANSPORT & STORAGE

Storage Conditions:

-15 °C without relative humidity control; and +40 °C at a relative humidity up to 80%, non-condensing.

Operation Conditions:

A temperature range of +5 °C to +35 °C; a relative humidity range of 20% to 80%, non-condensing.

ROUTINE MAINTENANCE

These checks should be carried out at each decontamination process, i.e. between patients or patient occupancy and weekly for longer term patients.

PUMP

- 1** Check the pump casing for cracks or other damage that could be dangerous.
- 2** Check the power cord (ensure there are no bare wires).

If any faults are detected remove the equipment from use and contact the Harvest Healthcare Service Department or your distributor.

OTHER COMPONENTS

- Check air cells and mattress interior for signs of damage or contamination, e.g. staining or fluid ingress at each decontamination process, i.e. between patients or patient occupancy (or weekly for longer term patients).
- The individual cells can be wiped clean with a mild antiseptic solution.
- All cells are replaceable and can be sourced from Harvest Healthcare.

POWER UNIT

Disconnect the power unit from the electricity supply before carrying out maintenance, repairs or cleaning.

Check all electrical connections and power lead for signs of wear and damage.

The power unit can be wiped down with a detergent or disinfectant solution. Do not use solvents. Unsuitable for sterilisation.

The use of inappropriate cleaning and detergent materials on medical equipment could damage surfaces and may compromise the ability to decontaminate medical devices adequately or may interfere with device function.

When the pump or mattress is no longer required dispose of the equipment in accordance with the local regulations. WEEE requirements do apply to the pump unit and any electrical components including cables which are used for or with this product.

ROUTINE SERVICING

SERVICING YOUR SYSTEM

The Harvest 1 pump should be serviced every **12 months** by Harvest Healthcare approved personnel using genuine Harvest Healthcare spare parts.



Failure to follow the service schedule may invalidate future warranty claims ('Guarantees & Warranties' can be found on page 23).

TROUBLESHOOTING

FAULT	CHECK THAT	STAGE 2 CHECK	IF PROBLEM PERSISTS
Pump shows no indication that it is powered up.	- Mains plug is plugged in and power switched on. - The power switch on the pump is switched on. - The fuse in the mains plug is not blown. - The wall socket that the pump is connected to is working correctly.	- Connect the pump to the nearest (working) mains outlet. - Replace the plug fuse with the correct type (5A fuse). - Try a different device in the mains outlet.	Contact Harvest Healthcare technical support. Before calling: Please ensure you have the serial number and model of equipment. Please record details of the results of the recommended tests. (Notes pages are provided at the back of this user manual).

FAULT	CHECK THAT	STAGE 2 CHECK	IF PROBLEM PERSISTS
The pump appears to be running but the mattress is not inflating correctly and or the low pressure light is illuminated.	PLEASE NOTE Inflation can take up to 30 minutes. 1. The hoses are routed correctly (not kinked) and connected to the pump correctly. 2. The CPR valve is not trapped and is in the closed position.	1. Disconnect and then re-connect the hoses to the outlet on the side of the pump. 2. Open then reclose the CPR valve, make sure the valve is not trapped in the bed mechanism.	Contact Harvest Healthcare technical support. Before calling: Please ensure you have the serial number and model of equipment. Please record details of the results of the recommended tests. (Notes pages are provided at the back of this user manual).
	1. There are no leaks in the mattress. 2. The tubes in the mattress are not disconnected or kinked.	1. Replace any damaged or leaking mattress parts with the correct genuine Harvest Healthcare spare parts. 2. Straighten out any kinked pipes and reconnect any disconnected joints.	

TROUBLESHOOTING

FAULT	CHECK THAT	STAGE 2 CHECK	IF PROBLEM PERSISTS
Some of the cells appear to be deflated.	This is normal for alternating pressure therapy. The mattress is made up of individual air cells. The alternating section is split up into 2 sections consisting of odd cells e.g. 1,3,5 etc and even cells e.g. 2,4,6 etc. These two sections will alternate through a 10 minute cycle in which time both sets of alternating air cells will have inflated and deflated sequentially.		
The system does not appear to be alternating.	Check that the static mode is not turned on. - Carefully mark one of the inflated cells with a pen. - Ensure that there are no kinks in the pipework down the side of the mattress.	- Monitor the cell for 7 minutes to see if it deflates. - Straighten out any kinked pipes.	Contact Harvest Healthcare technical support. Before calling: Please ensure you have the serial number and model of equipment. Please record details of the results of the recommended tests. (Notes pages are provided at the back of this user manual).

FAULT	CHECK THAT	STAGE 2 CHECK	IF PROBLEM PERSISTS
The pump is vibrating or making excessive noise.	The pump is fitted to the bed correctly.	Reposition the pump unit.	Contact Harvest Healthcare technical support. Before calling: Please ensure you have the serial number and model of equipment. Please record details of the results of the recommended tests. (Notes pages are provided at the back of this user manual).
The mattress is uncomfortable.	Check the comfort setting on the pump.	Set the pump to the correct setting using the guide on the front of the pump case.	



A comprehensive service manual for this system is available upon request.

PARTS LIST

APPLIED PARTS

HPU1 Harvest 1 Pump (only)

REPLACEMENT PARTS

PU100	Connector
PU101	Compressor
PU102	Bellows
PU103	Timer Motor
PU104	Rotor Valve
PU105	On/Off Switch
PU107	Low/Normal Pressure LED Indicator
PU108	Control Dial
PU109	Low Pressure Assembly Micro Switch/Bag
PU110	Main Power Lead
PU111	Front Panel
PU112	Case
PU113	Bed Hooks (Pair)
UN012	Filter

GUARANTEES & WARRANTIES

PUMP

The pump is covered by warranty for a period of 3 years from the date of purchase. This excludes all serviceable parts such as the bellows and filters which are recommended to be changed every 12 months in line with the service schedule.

GUARANTEE

Harvest Healthcare Ltd guarantees to repair or replace all goods supplied to its customers which are found to be defective whilst still in their applicable warranty period. All warranties are subject to the following conditions:

- A** Warranty/guarantee is subject to all guidelines being adhered to.
- B** That the equipment has been used for the purpose for which it was intended.
- C** That the usage has been on a fair wear and tear basis. This does not include user damage.
- D** That Harvest Healthcare's cleaning/disinfecting guidelines have been followed.
- E** Harvest Healthcare's maintenance guidelines have been followed (please refer to the product manual).
- F** That ALL maintenance has been carried out by a suitably qualified and competent person.
- G** That all parts used are OEM (Original Equipment Manufacturer) parts and were supplied by Harvest Healthcare either directly or through a distributor.
- H** All warranties begin from the time the product leaves the premises of Harvest Healthcare.
- I** All repairs and replacements will be at the sole discretion of Harvest Healthcare.

Our standard terms and conditions of sale can be found on our website or by request to Harvest Healthcare Ltd

If this device malfunctions and a serious incident occurs please contact Harvest Healthcare Ltd or your competent authority. A member of our service team will be happy to help you and offer advice.

Email: servicing@harvesthealthcare.co.uk
Telephone: **01709 377172**



Sheaf House, Bradmarsh Way,
Bradmarsh Business Park,
Rotherham, S60 1BW


T +44 (0)1709 377 172

F +44 (0)1709 377 173

E sales@harvesthealthcare.co.uk
www.harvesthealthcare.co.uk



Airflo (Xiamen) Medical Co., Ltd. 4F, No.6, East Haijing
Road, Haicang, 361026 Xiamen, Fujian, China



Share Info GmbH
Am Schulzentrum 12, 41564 Kaarst, Germany



Share Info Ltd
3rd Floor, Office C, Townend House, Park Street,
Walsall, West Midlands, WS1 1NS, UK

Serial No:

DOCUMENT REFERENCE: - 003015B - HPU1- Harvest 1 Pump Manual - April 2025

© Copyright Harvest Healthcare **Harvest Healthcare Limited**. Company No: 07210261
Our Full Terms & Conditions are available by request or can be found on our Website.
Harvest Healthcare reserves the right to alter or amend this document without notice.